



# **SD25**

## **2.5 Ampere Stepper Motor Driver**

## General Description

Driving stepper motor is common necessity in most robotic projects. Stepper motor is a brushless, synchronous electric motor that can drive a full rotation into a large number of steps. Stepper motor is ideally suited for precision control. This motor can operate in forward/reverse with controllable speed from a microcontroller through a driver circuit. There are various kinds of stepper motor. Some example are variable reluctant stepper motor, permanent magnet stepper motor, bipolar/unipolar stepper motor, bifilar stepper motor and hybrid stepper motor.

**SD25** is an easy-to-use professional stepper motor driver, which can control two-phase stepping motor. It's compatible with any CNC breakout board or any micro-based control board such as Arduino boards. **SD25** can drive up to 2.5 amperes peak current per phase with 4 levels adjustable phase current 0.5A, 1.3A, 1.9A and 2.5A via DIP switch. Micro-step resolution is also adjustable using DIP switch. One of the most important features of **SD25** driver reduces the holding current to be percent of the nominal operating current to overcome excessive driver heating during motor stopping. **SD25** driver features over temperature alarm for thermal protection. All input signals are opto-isolated to insure safety in industrial applications.


## SD25 features

- Single input power (15–36VDC)
- 2.5 Amps/phase maximum output motor driving current.
- 4 Selectable work current (0.5A, 1.3A, 1.9A, 2.5A).
- Auto idle current reduction (20%).
- Step, direction and enable input signals are TTL compatible.
- Steps/Revolution 200,400,1600, 3200.
- Test mode operation.
- All controlling input signals are opto-isolated for safety.
- High speed opto-coupler isolator on step and direction.
- Over temperature and over current protection.
- LED indicator for power input (green) and fault (red).
- Large area heat sink.
- Dimensions: 95 X 57 X 36 mm.


## Electrical specifications

Parameters	Min	Typical	Max	Unit
Supply voltage	15	24	36	V
Output current	0.5	-	2.5	A
Input signal current	5	10	20	mA
Pulse Frequency	0	-	50	KHz
Minimum pulse width	10	-	-	μS
Thermal shutdown	120	130	140	°C

## System overview

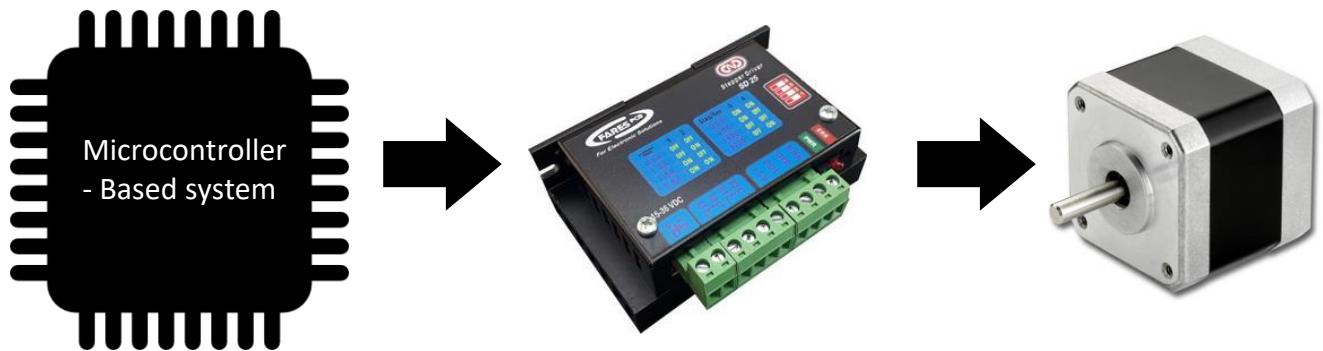

**Single motor control system**

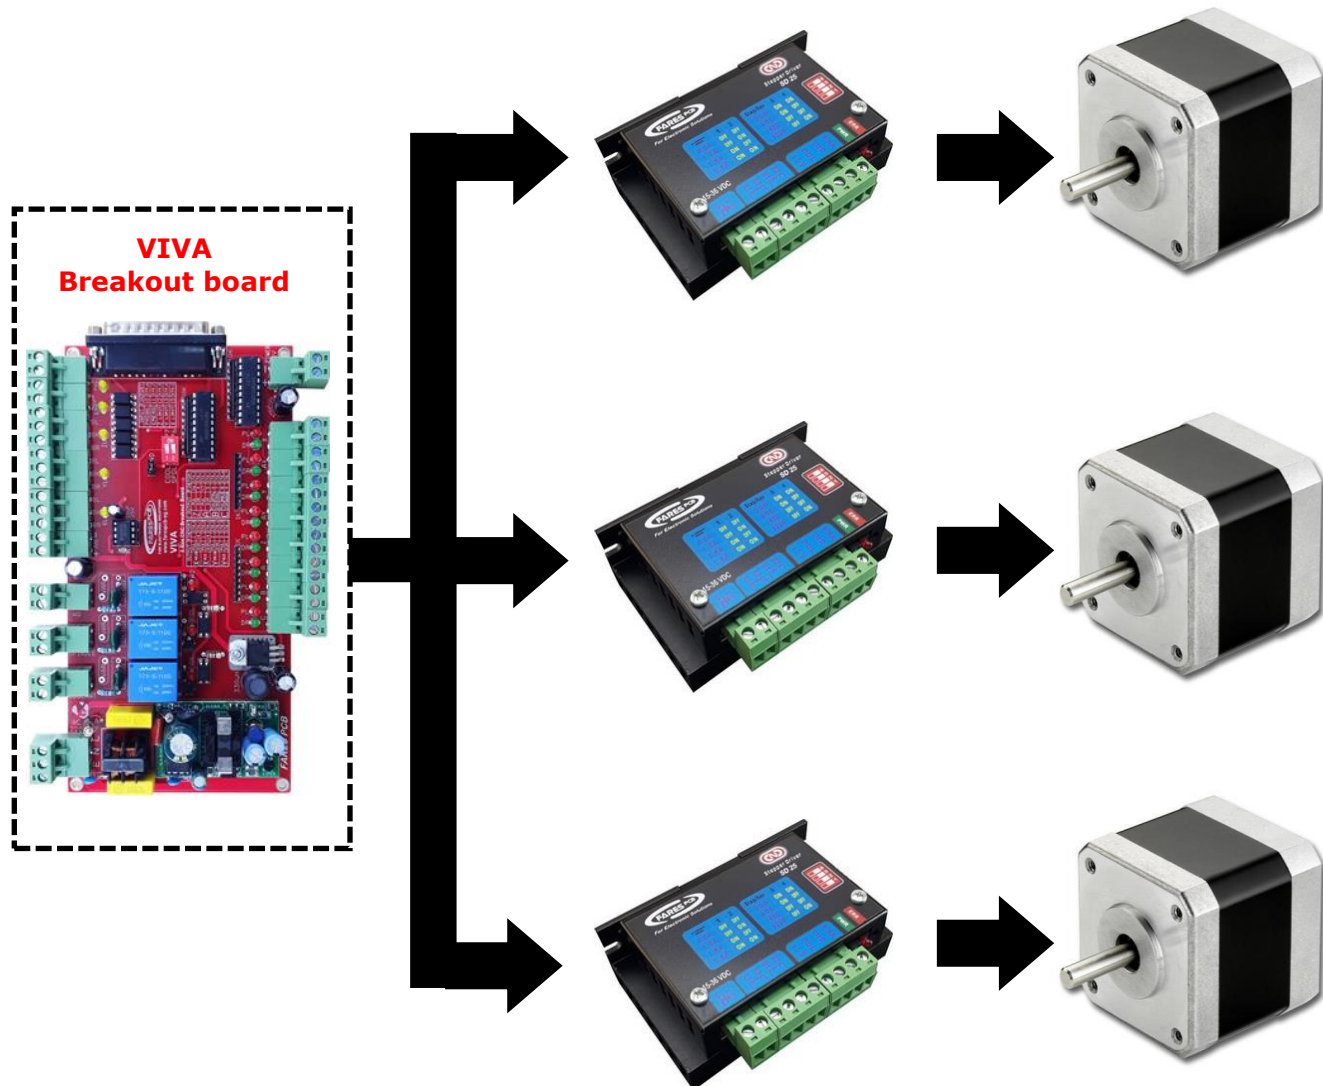

**Three axes motor control system**

## Connector signal definition

Label	Direction	Name	Function
VDC	Power	Driver supply power	Power supply for both motor power and internal control circuit (15V - 36V)
A1	Output	Motor Winding A	Motor coil A terminals
A2	Output		
B1	Output	Motor Winding B	Motor coil B terminals
B2	Output		
+5V	Input	Positive common for external control signals	Supply power for opto-couplers. Usually come from breakout board or microcontroller biasing voltage
PUL	Input	Stepping input pulse	Input to drive the stepper motor. This pin is TTL logic. Each pulse (logic change from 0 to 1) will drive the stepper motor one step
DIR	Input	Stepper driver rotation direction input	Input for stepper motor driver to rotate CW (clockwise) or CCW (counterclockwise). This pin is TTL logic. The direction depends on the connection sequence of stepper motor terminals
ENA	Input	Stepper driver enable input	Input pin to enable SD25 driver. This pin is TTL logic. "5V" or float input (not connected) will enable the motor driver further hold the shaft of stepper motor while "0V" will disable the motor driver and release the shaft of the stepper motor <b>By default, the driver is enabled. Don't connect any enable signal if your driver is always enabled</b>

### Caution:

**Don't connect or disconnect the motor while the driver is energized. This may cause permanent damage to the Driver.**

## LED indicator description


LED	Color	State	Function
<b>Power</b>	Green	OFF	No power connected
		ON	Power supply connected
<b>ERR</b>	RED	OFF	No error (Normal operation)
		Flash	Thermal shutdown alarm

## Buzzer operation description

Buzzer State	Function
<b>OFF</b>	No error (Normal operation)
<b>Fast 300 msec on 300 msec off</b>	Thermal shutdown alarm

### Note:

**If an alarm is initiated, SD25 driver is halted and it must be power restarted to resume working.**

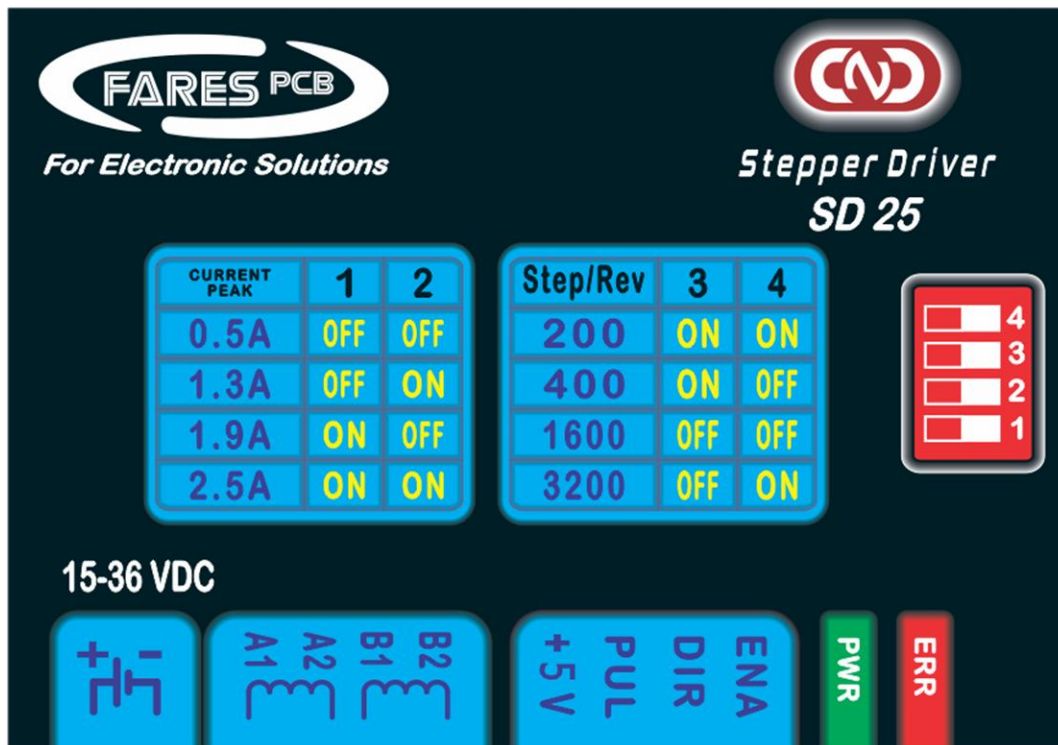

## Resolution setting

Steps / rev	DIP switch setting	
	3	4
200	ON	ON
400	ON	OFF
1600	OFF	OFF
3200	OFF	ON

## Current setting

Peak current	DIP switch setting	
	1	2
0.5 A	OFF	OFF
1.3 A	OFF	ON
1.9 A	ON	OFF
2.5 A	ON	ON

## Hold current

**SD25** set holding current automatically to 20% of the nominal operating current. So, it saves power consumption and reduces heating of driver and motor.

For example if stepper motor work current is adjusted to 2.5 Ampere (Switch 1 = ON : Switch 2 = ON) , Then motor hold current in stopping state is 20% it, I.e. 0.5 Ampere.




## Stepper Motor Wiring Diagram


**SD25** may drive 4, 6 or 8 lead stepper motors. Some motor wiring provides high torque and some other provides high speed.

Figures below shows some motor types and its connections to obtain high torque and speed.


**Four leads motor connection**

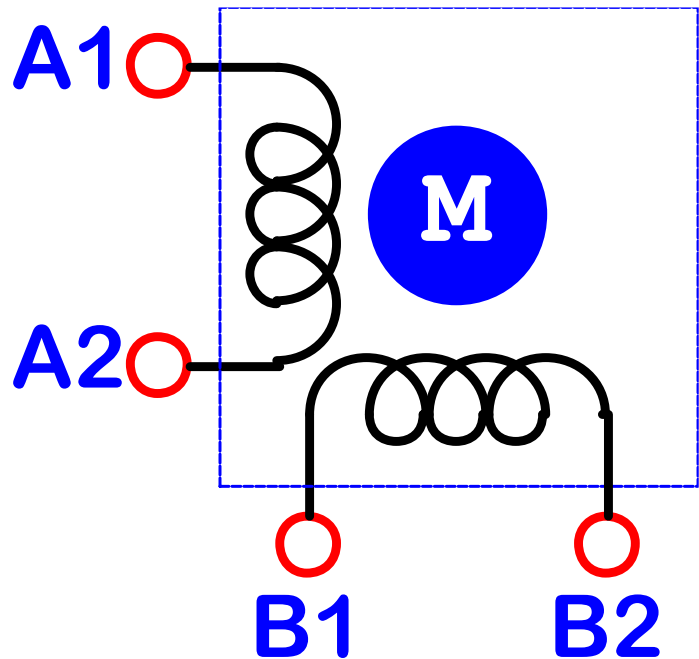


**Six leads motor  
(High torque connection)**

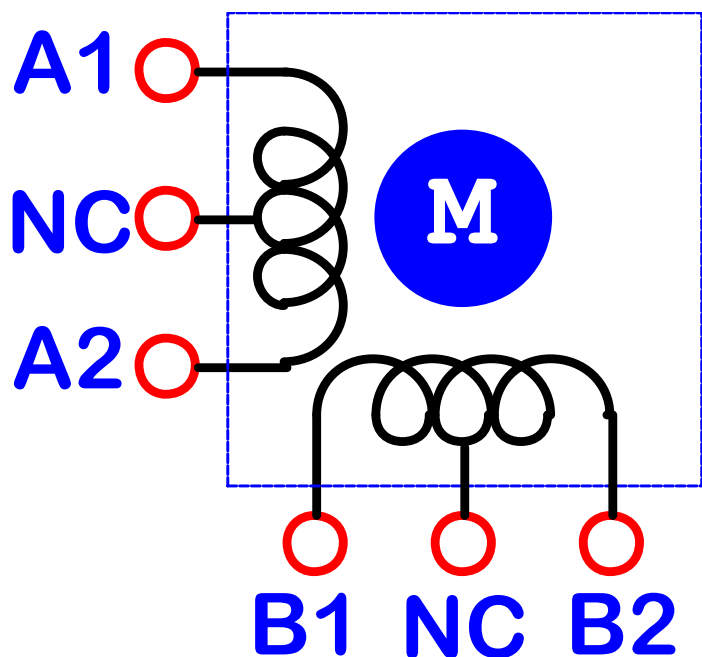


**Six leads motor**  
**(High speed connection)**



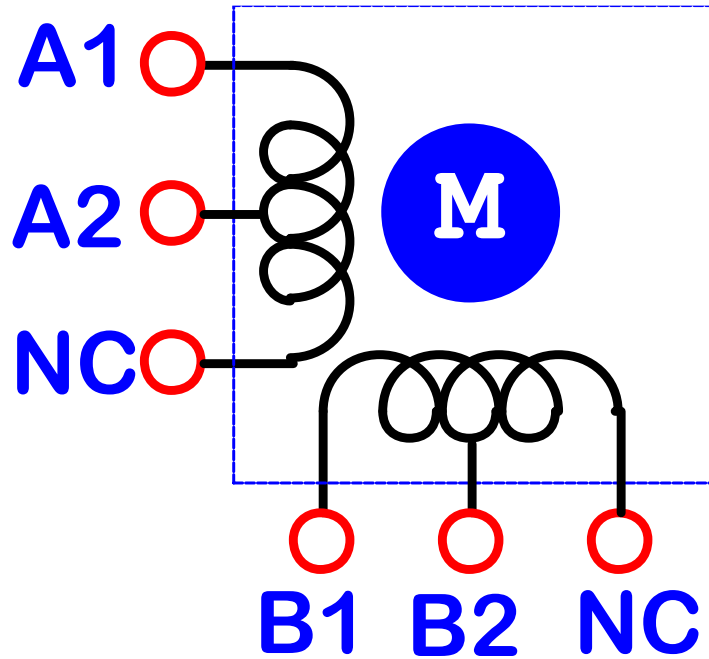



**Eight leads motor**  
**(High torque connection)**

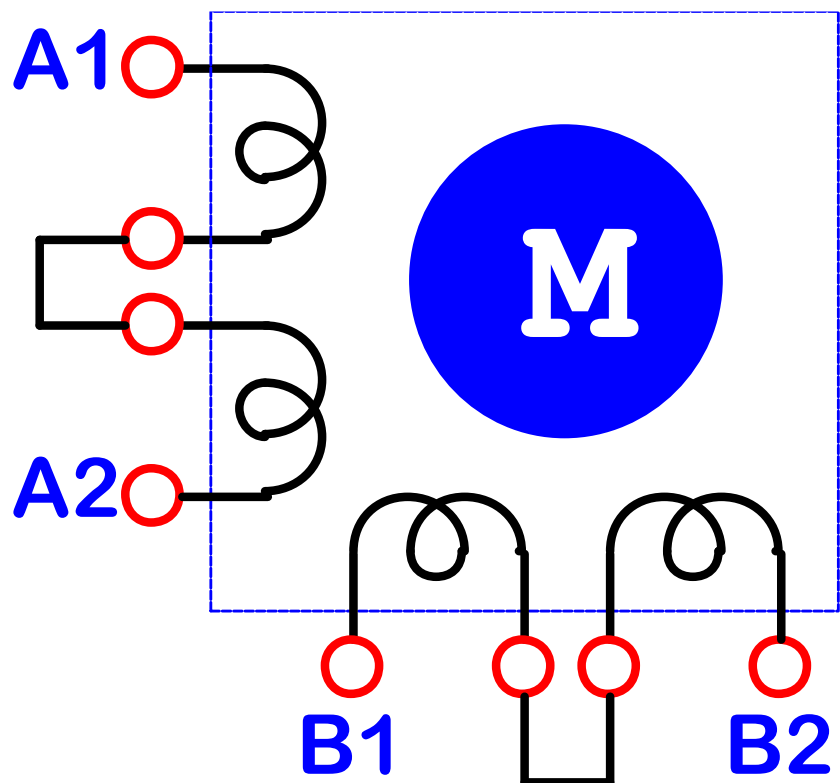

**Eight leads motor  
(High speed  
connection)**

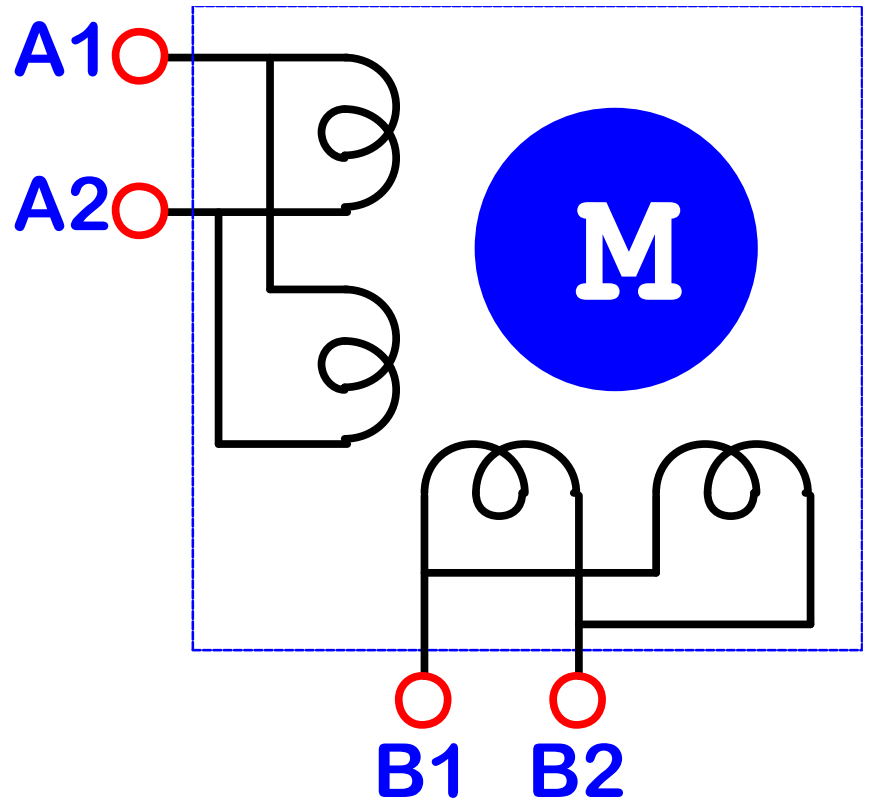

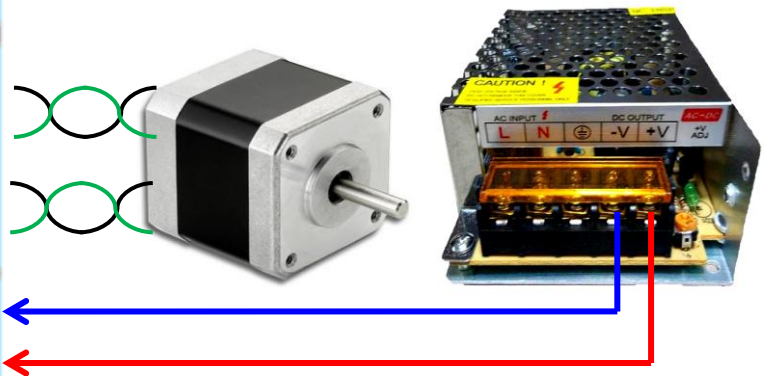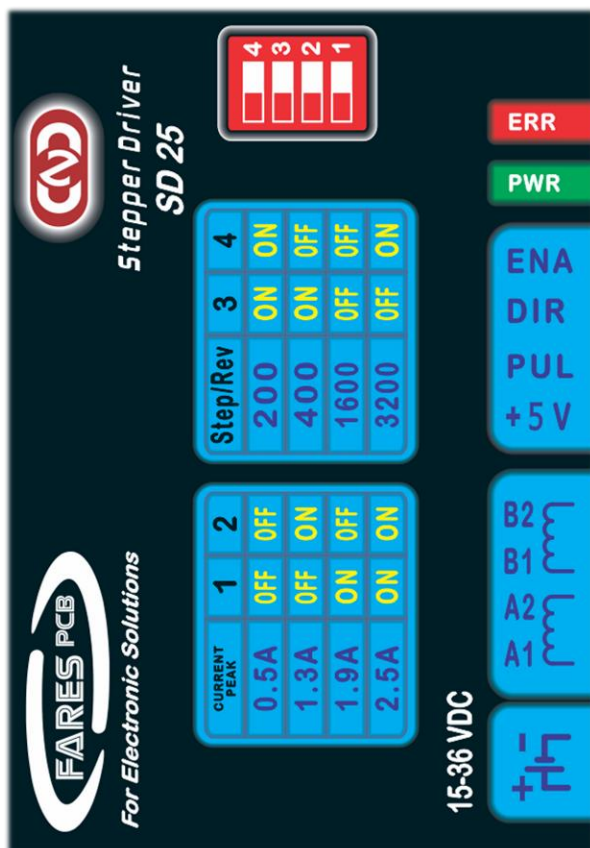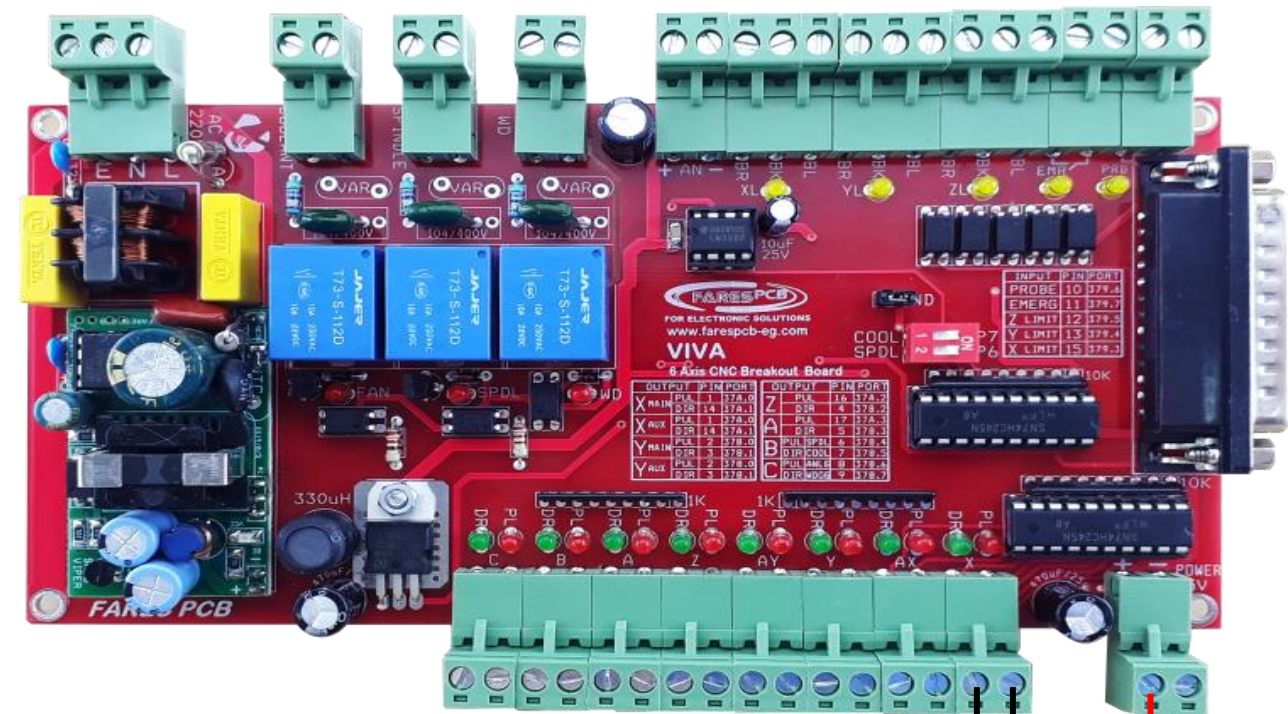
**Interfacing VIVA breakout board to SD25 driver**

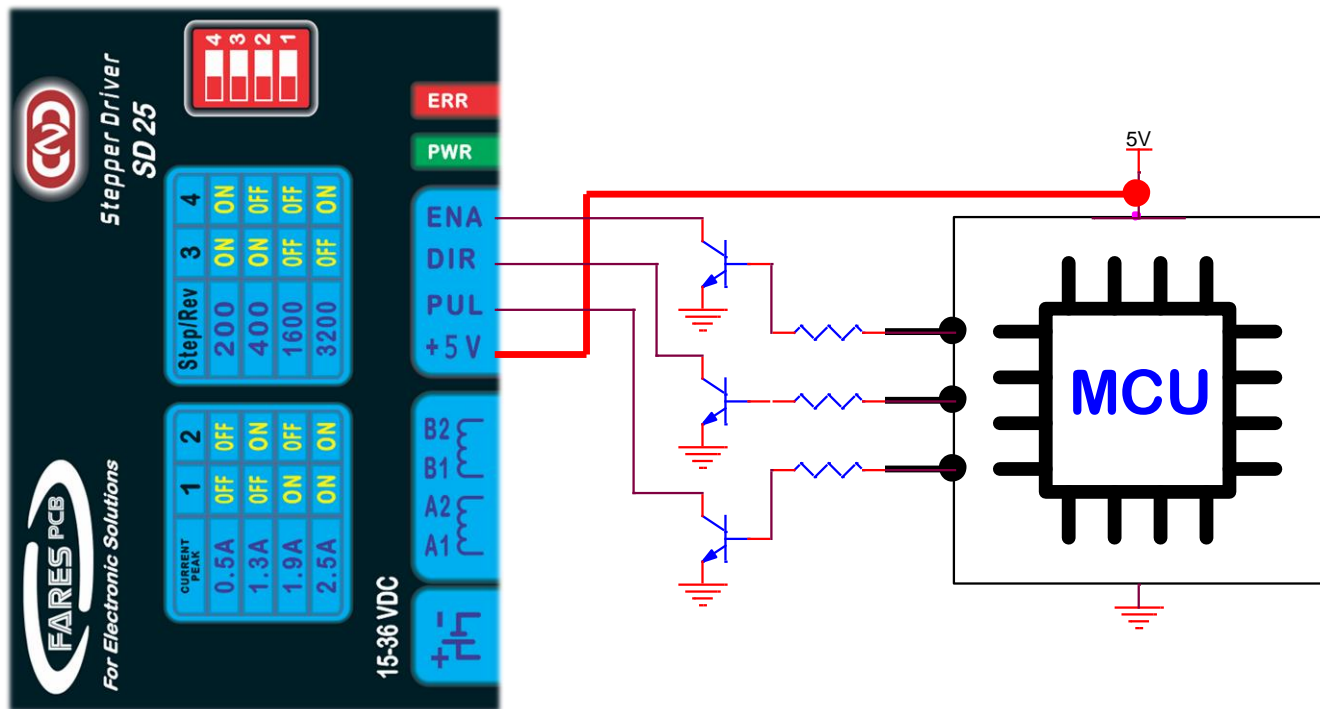

### ***Interfacing microcontroller to SD25 Using transistors***

#### **Note:**

If microcontroller port can sink current up to 10mA or more, there's no need for external transistors, Just connect microcontroller port direct to driver.

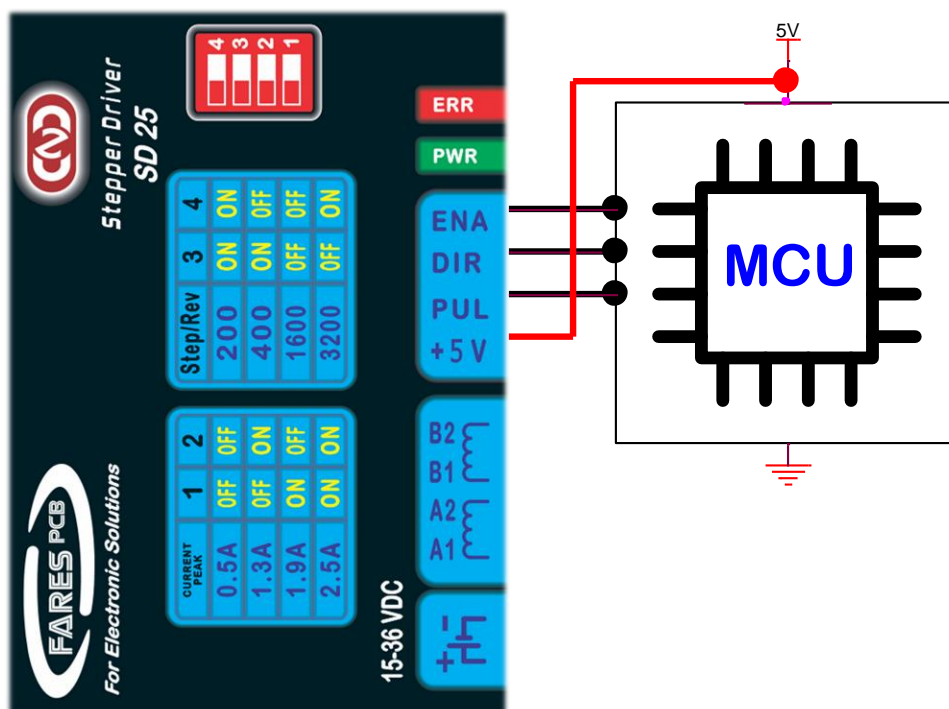

### ***Direct microcontroller interfacing to SD25***

**Copyright © 2019 by FARESPCB**

For our full range of products see our website at <http://www.fares-pcb.com>

If you have any technical questions about our products, e-mail us at [www.support@fares-pcb.com](mailto:www.support@fares-pcb.com)

**FARESPCB co. (Head office)**

**164 Tahrir st,  
Bab El-Louq,  
Cairo,  
Egypt.  
Tel: +202-23904484  
Mob:+201000652977**

**FARESPCB co. (Branch office)**

**4 El-Shabrawy st,  
Road El-Farag,  
Cairo,  
Egypt.  
Tel: +202-24577118  
Mob:+201022457902**

**FARESPCB Co reserves the right to make changes in circuit design, software and/or specifications at any time without prior notification. For the most up-to-date information, please visit our web site at <http://www.fares-pcb.com>**

**Information furnished by FARESPCB is believed to be accurate and reliable. However, FARESPCB assumes no responsibility arising from the use of the specifications described.**

**Warrantee: FARESPCB™ warrants its products against defects in materials and workmanship for a period of 30 days. If you discover a defect, we will, at our option, repair or replace your product or refund your purchase price. This warrantee does not cover products that have been physically abused or misused in any way.**

**Distributor:**

**RAM Electronics  
32 El Falaky St. Bab El Louk  
Tahrir, Cairo  
Egypt.  
Tel: +202-27960551  
[www.ram.com.eg](http://www.ram.com.eg)  
[Sales@ram-electronics.com](mailto:Sales@ram-electronics.com)**

