

# **F128**

## **ATMEGA128 Module**

### **ATMEL AVR Microcontroller**

## General Description

ATMEGA128A Microcontroller is a powerful 8 bit microcontroller from ATMEL. however, many embedded system designers specially those fresh graduated avoid using it in embedded projects because of its 64 pin TQFP package which complicate layout design and breadboard applications.

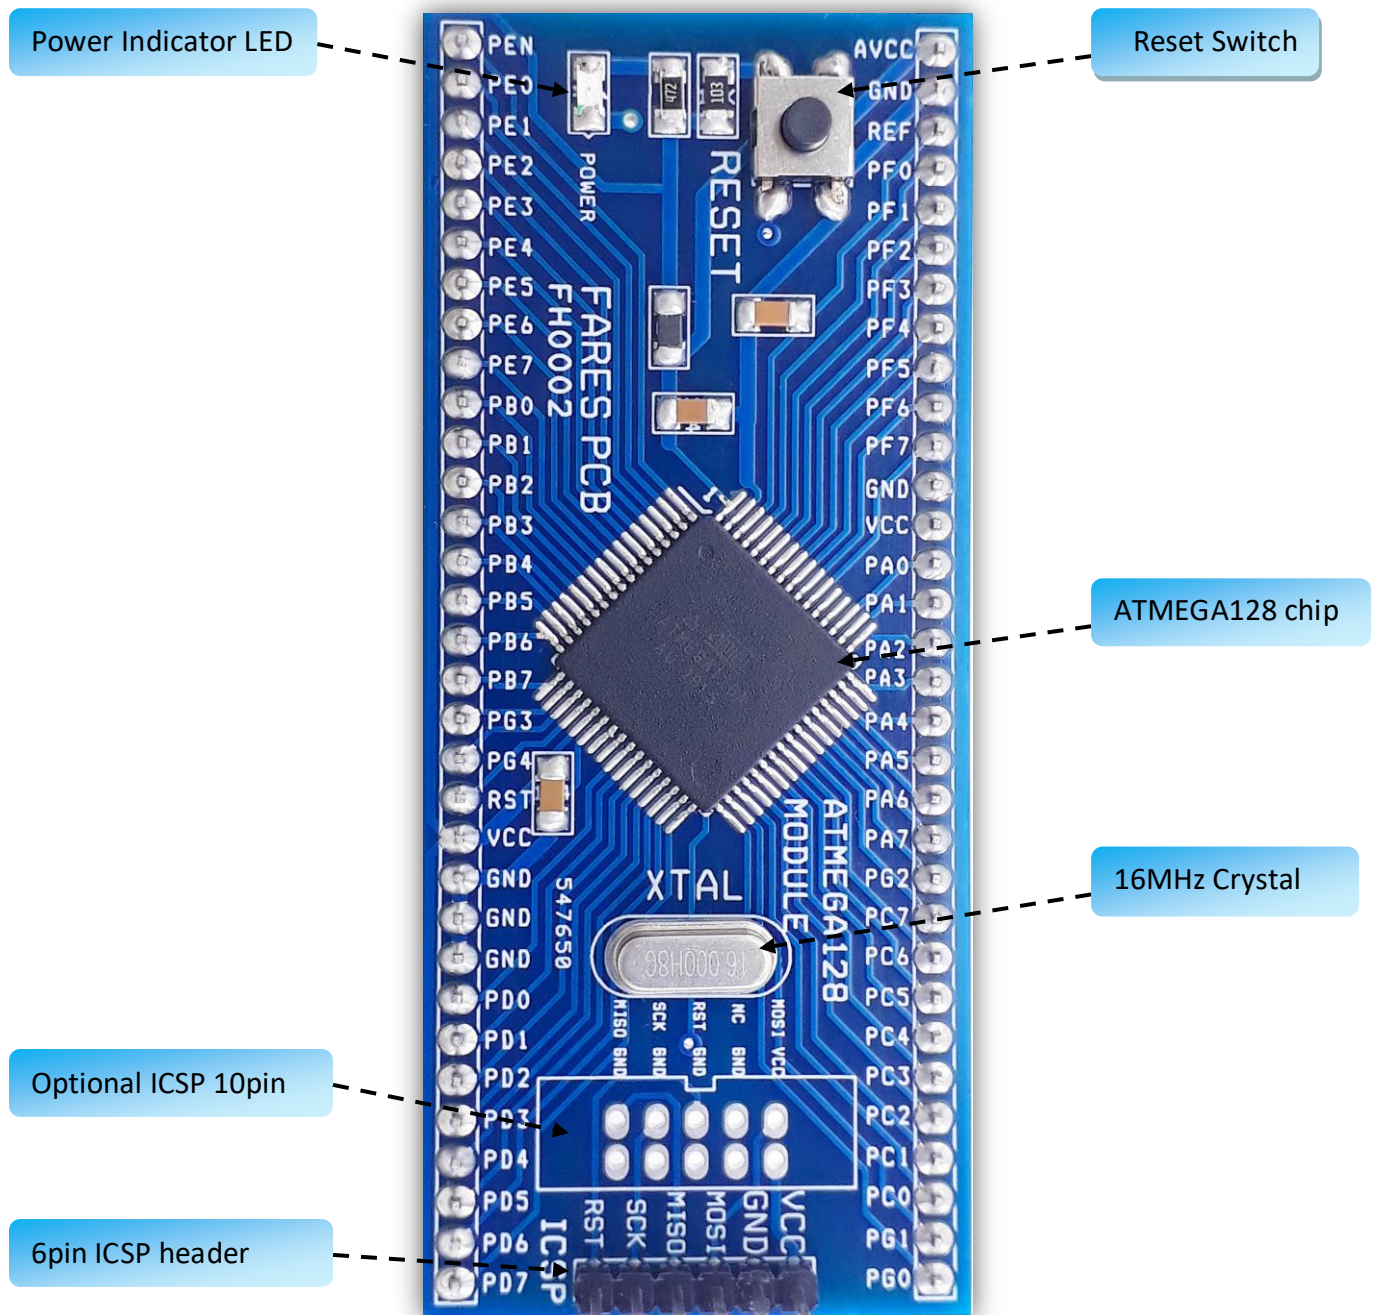
**F128 Module** is a versatile and cheap microcontroller module that make life easy to build your project using smd ATMEGA128A microcontroller chip.

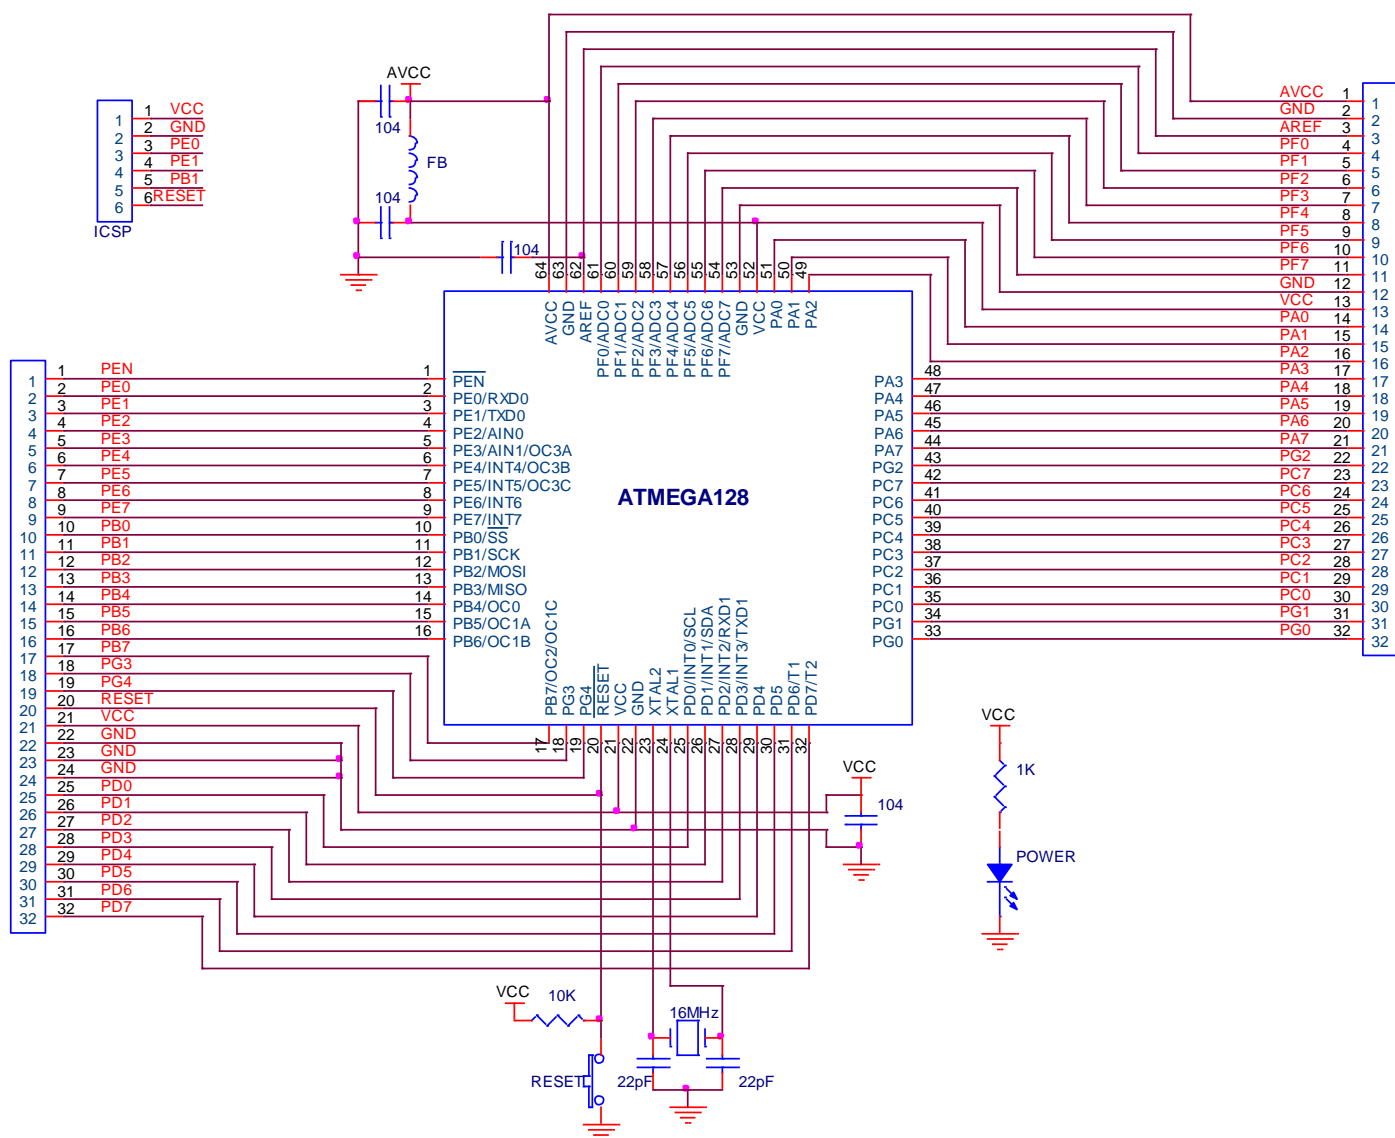
**F128 Module** extends all I/O ports to male header pins to match bread board testing and wiring. also it can be plugged in a female header in your application.

**F128 Module** provides ICSP header for direct connection to external programmer such as USBasp programmer  
Also F128 module contains reset switch , LED for power indication , filtration circuit for Analog supply is added , and bypass capacitors for power pins.

## **F128 Module key features**

- ATMEGA128A microcontroller (128K Flash, 4K SRAM, 4K EEPROM).
- On board 16MHz crystal oscillator.
- Powered from 5V.
- 6 pin ICSP header socket .
- Power on reset circuit with reset switch.
- SMD LED for power indication.
- All microcontroller I/O pins are brought out via pin header. In addition to REF , RESET and power pins for both sides.
- Size 84mm X 35mm.

**F128 Module**

**F128 Module (schematic)**

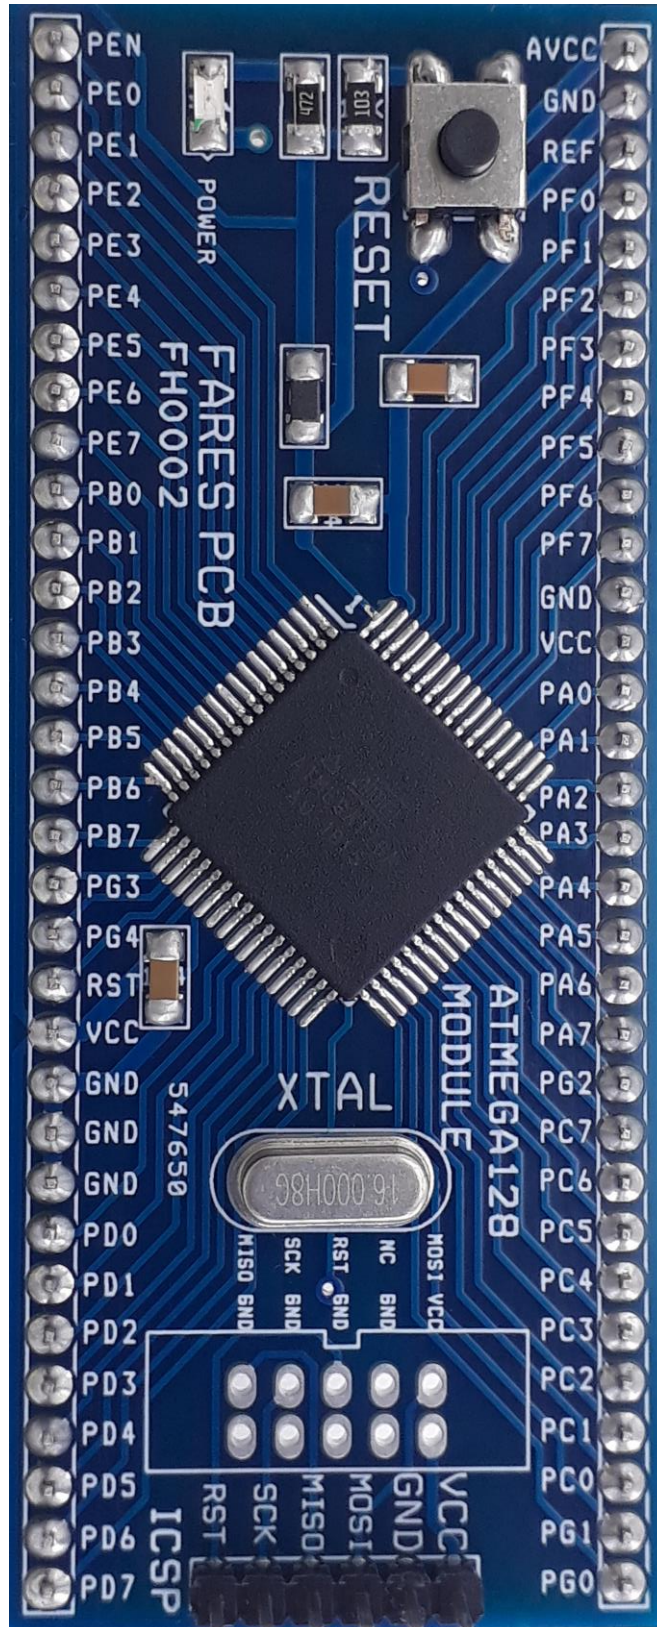
## **ATMEGA128A features**

- 128KB Flash program memory
- 4KB EEPROM data memory
- 4KB SRAM
- 53 Programmable I/O lines
- 8 channel 10bit A/D
- Dual Serial UART
- Two wire serial interface
- Master/Slave SPI Interface
- 6 PWM channels
- Two 8bit Timer/Counter and Two 16bit Timer/Counter
- Crystal speed up to 16MHz



**Pin out function of F128 Module**

<b>1</b>	<b>PEN</b>
<b>2</b>	<b>PE0</b>
<b>3</b>	<b>PE1</b>
<b>4</b>	<b>PE2</b>
<b>5</b>	<b>PE3</b>
<b>6</b>	<b>PE4</b>
<b>7</b>	<b>PE5</b>
<b>8</b>	<b>PE6</b>
<b>9</b>	<b>PE7</b>
<b>10</b>	<b>PB0</b>
<b>11</b>	<b>PB1</b>
<b>12</b>	<b>PB2</b>
<b>13</b>	<b>PB3</b>
<b>14</b>	<b>PB4</b>
<b>15</b>	<b>PB5</b>
<b>16</b>	<b>PB6</b>
<b>17</b>	<b>PB7</b>
<b>18</b>	<b>PG3</b>
<b>19</b>	<b>PG4</b>
<b>20</b>	<b>RST</b>
<b>21</b>	<b>VCC</b>
<b>22</b>	<b>GND</b>
<b>23</b>	<b>GND</b>
<b>24</b>	<b>GND</b>
<b>25</b>	<b>PD0</b>
<b>26</b>	<b>PD1</b>
<b>27</b>	<b>PD2</b>
<b>28</b>	<b>PD3</b>
<b>29</b>	<b>PD4</b>
<b>30</b>	<b>PD5</b>
<b>31</b>	<b>PD6</b>
<b>32</b>	<b>PD7</b>



<b>AVCC</b>	<b>64</b>
<b>GND</b>	<b>63</b>
<b>REF</b>	<b>62</b>
<b>PF0</b>	<b>61</b>
<b>PF1</b>	<b>60</b>
<b>PF2</b>	<b>59</b>
<b>PF3</b>	<b>58</b>
<b>PF4</b>	<b>57</b>
<b>PF5</b>	<b>56</b>
<b>PF6</b>	<b>55</b>
<b>PF7</b>	<b>54</b>
<b>GND</b>	<b>53</b>
<b>VCC</b>	<b>52</b>
<b>PA0</b>	<b>51</b>
<b>PA1</b>	<b>50</b>
<b>PA2</b>	<b>49</b>
<b>PA3</b>	<b>48</b>
<b>PA4</b>	<b>47</b>
<b>PA5</b>	<b>46</b>
<b>PA6</b>	<b>45</b>
<b>PA7</b>	<b>44</b>
<b>PG2</b>	<b>43</b>
<b>PC7</b>	<b>42</b>
<b>PC6</b>	<b>41</b>
<b>PC5</b>	<b>40</b>
<b>PC4</b>	<b>39</b>
<b>PC3</b>	<b>38</b>
<b>PC2</b>	<b>37</b>
<b>PC1</b>	<b>36</b>
<b>PC0</b>	<b>35</b>
<b>PG1</b>	<b>34</b>
<b>PG0</b>	<b>33</b>

**Note:**

1 - Powering F128 module from VCC only with 5V. It's not recommended to power module from AVCC. AVCC is 5V analog output power created internally from VCC supply pin. Use AVCC to power external analog circuits such as voltage divider or operational amplifiers.

2 - F128 Module is shipped with fuse bytes set to ,  
Low fuse : &H9F  
High fuse : &HC9  
Extended : &HFF

Brown-out Detection(BOD): Enabled (2.7V).

Clock Source: External crystal oscillator.

Boot reset vector is not selected.

Random fuse settings changing is risky. You should take special care while changing these settings. Incorrect fuse settings may cause incorrect microcontroller functioning.

**Copyright © 2019 by FARESPCB**

For our full range of products see our website at <http://www.fares-pcb.com>

If you have any technical questions about our products, e-mail us at [www.support@fares-pcb.com](mailto:www.support@fares-pcb.com)

**FARESPCB co. (Head office)**

**164 Tahrir st,  
Bab El-Louq,  
Cairo,  
Egypt.  
Tel: +202-23904484  
Mob:+201000652977**

**FARESPCB co. (Branch office)**

**4 El-Shabrawy st,  
Road El-Farag,  
Cairo,  
Egypt.  
Tel: +202-24577118  
Mob:+201022457902**

**FARESPCB Co reserves the right to make changes in circuit design, software and/or specifications at any time without prior notification. For the most up-to-date information, please visit our web site at <http://www.fares-pcb.com>**

**Information furnished by FARESPCB is believed to be accurate and reliable. However, FARESPCB assumes no responsibility arising from the use of the specifications described.**

**Warrantee: FARESPCB™ warrants its products against defects in materials and workmanship for a period of 30 days. If you discover a defect, we will, at our option, repair or replace your product or refund your purchase price. This warrantee does not cover products that have been physically abused or misused in any way.**

**Distributor:**

**RAM Electronics  
32 El Falaky St. Bab El Louk  
Tahrir, Cairo  
Egypt.  
Tel: +202-27960551  
[www.ram.com.eg](http://www.ram.com.eg)  
[Sales@ram-electronics.com](mailto:Sales@ram-electronics.com)**

